

# Setup Guide Linksys Broadband Router

## Physical connections

1. Connect Ethernet cable from modem to Linksys Broadband Router **Internet** port.
2. Connect Analog Phone to **line 1** on your Linksys Broadband Router device.
3. Power ON both modem and Linksys Broadband Router device.



## Front panel Linksys Broadband Router

**Internet** – Indicates Internet Connection (green LED)

**Ethernet** - Indicates LAN connection (PC or LAPTOP)

**Phone 1 LED** - Indicates connection to external phone (RJ 11).

**Phone 2 LED** - Indicates connection to external phone (RJ 11).

## Back Panel Linksys Broadband Router

**Phone 1** - For external phone connection (RJ 11 ).

**Phone 2** - For external phone connection (RJ 11 ).

**Internet** - Port used for connecting the cable from internet.

**Ethernet** - Linksys Broadband Router also works as a router. To use Internet along with VoIP you can connect your laptop or PC directly to these ports with DHCP enabled on your NIC card.

Power port.

## Using Pigeon Service:

All TA devices are preconfigured for your phone number & ease of use.

Once the TA gets internet it will automatically register with the SIP server.

You can check if a TA is registered or not; by picking the receiver of the phone.

If you get dial tone; it means the phone is registered successfully. If you get continuous beeping; you need to check the internet connectivity or call Pigeon technical support number for assistance.

By default the credit balance is set to ZERO & you need to recharge your account before start making any calls.

Following two methods for easy recharge are available:-

**1) IVR system:** Dial 5977777 from your phone; you will get all the information about your account & follow the IVR recharge the account.

**2) Web Portal:** Visit <http://myaccount.pigeonvoice.com>  
Use the web portal access details (username/password) given with the Pigeon box to manage/recharge your account